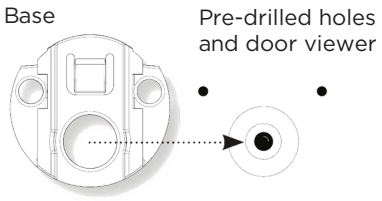
SPEYE GUARD®
SECURED WITH PRIVACY LOGIC

# INSTALLATION INSTRUCTIONS

TOOLS NEEDED Phillips® screwdriver, nail punch, level

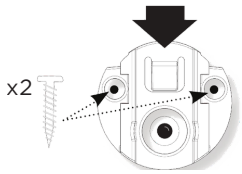
## 1 STEP ONE

Position base over existing door viewer with mounting holes aligned horizontally



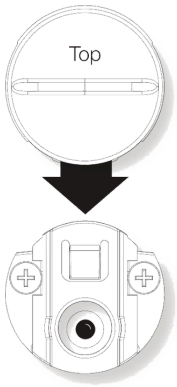

## 2 STEP TWO

Mount base onto door with screws



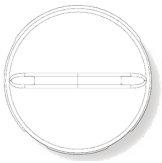

## 3 STEP THREE

Slide top down over base to allow snap to engage




## 4 STEP FOUR

Door viewer cover is in closed position



**For questions or comments, please contact: info@speyeguard.com | (877) 773-9348**